

Spatgroup 88

position of the speakers, it must reflect the real positions and distances between each speaker in the room

X / Y position of the group



X and Y distance between each point, so it sets also the direction of the alignment

Radius and Angle of rotation of the circle figure

positions of the eight inputs

resets the positions to default values

Separate settings of distance for the control of the speakers intensity, according to the distance between the speaker and the position of the sound. A smaller value means that the sound will disappear on this speaker for a shorter distance. At the max value, the intensity of the sound on this speaker will be full whatever the position of the sound is (depends also of the Global setting).

Global Distance Zone : modify the intensity values for all the speakers, by adding or substrating its value to the separate settings above.